

## *dCS Puccini Player* v1.41 Software Update

Please read these instructions through fully at least once before attempting the update.

The CD supplied with these instructions enables the software in any *dCS Puccini Player* loaded with earlier software to be updated to version 1.41. *dCS* contact information is given at the end of this document.

If you are nervous about performing this update, please do not worry, it is quite easy.



Only use CDs provided by *dCS*.

### Update Procedure

- Mute your power amplifier or switch it off.
- Load the *dCS Puccini* Update CD into the Player, **PLAY** the disc for about 10 seconds and then press **STOP**. The disc must **not** be playing at this point.
- Open the *Puccini Player*'s menu by pressing the **Menu** button on the front panel. Press the **Menu** button again to select the **Information** menu. Press the **→** button 3 times to highlight the **CD Update** page and press the **Menu** button to start the update.

The update is largely automatic from this point. The display sequence is shown below, with approximate times.

00:00 **Please wait - Starting CD – Scanning – OK** are displayed in sequence.

If there is anything wrong with the *dCS* CD that has been loaded, or it does not match the product, the unit will display **Wrong Disc!** and revert to normal operation. Don't worry – the internal software is unchanged. If either of the above cases occur, contact your *dCS* distributor or *dCS*.

00:25 **Ver 1.41**

01:15 **1/32** The first block of data is read from the disc.

02:15 **2/32** The second block of data is read ...

...

32:15 **32/32** The last block of data is read.

33:10 **Please wait** **DO NOT SWITCH OFF**. The unit reboots.

33:15 **Puccini Player** **DO NOT SWITCH OFF**.

35:50 **Welcome**

36:00 The unit finishes uploading the new software and reads the disc.

This issue includes a Display software update (version 1.2), which must be installed if the previous software issue loaded in the Player was 1.11 or earlier.

- Press the **Menu** button 3 times to display the **Version Information** menu page.

If you see on the display: **Display version: 1.10 (NEEDS UPDATE) PRESS VOL+ TO UPDATE :**

- Press the **VOL+** button once, **DISPLAY UPDATE** will appear on the display.



DO NOT switch off during this stage.

- After 30 seconds, the display will darken, but still display **DISPLAY UPDATE**. Switch the *Puccini Player* off (NOT just to sleep mode), wait 10 seconds, then switch on again. As the unit boots up, you will see **DISP 1.2** in the lower right corner of the start-up screen.

Your *Puccini Player* is now ready for use.

## Problems?

- If the display does not change for more than 5 minutes or there is a power failure, switch off the unit at the rear panel switch, wait 10 seconds, then switch on and start the update again.
- If the disc skips or you accidentally advance the Player, the unit will display **Skipped!** Switch off the unit at the rear panel switch, wait 10 seconds, then switch on and start the update again.
- If the **Non Seq** message appears on the display, the most likely cause is that the update CD is faulty. There is no cause to worry as the original software is backed up inside the unit. Check the disc for dirt or damage. If the disc appears to be dirty, wipe it gently from the centre outwards with a dry soft cloth. If it is damaged, contact your local dCS distributor or dCS for a replacement. If it appears to be OK, run the **CD Update** routine again to load the new software.



If your *Puccini Player* starts up correctly but has a problem of some kind, do not repeatedly CD Update as this **cannot** solve the problem.

## What's new in v1.41?

This version corrects a bug that causes the left channel of DoP data to be output on both channels.

For more information, please download the latest version of the *Puccini Player User Manual* from [www.dcsltd.co.uk/page/support](http://www.dcsltd.co.uk/page/support). Printed copies of the *Puccini Player* 1.4x manual may be purchased from dCS.

## Obtaining and loading a license

If the upsampling license code was already loaded before this update, this feature is still active.

If you would like to add upsampling for the digital inputs, please visit [www.dcsltd.co.uk](http://www.dcsltd.co.uk) (or contact dCS) and register your unit to obtain a license. A license charge will be made for players originally shipped from dCS before 1<sup>st</sup> April 2009.

Once you have the 25-digit license code, press the **Menu** button twice, press the **→** button twice, then press the **Menu** button again to open the **Player Information** page. Use the **→** button to scroll to the bottom of the screen and press the **Menu** button again to display the **License** screen. Enter the 25-digit license code using the numbered buttons on the remote control, then press the **MUTE** button. If you make a mistake while entering the code, use the remote's **Volume +/-** buttons to scroll across the screen and correct the number. Each Player has a unique license code, available only from dCS.

## If You Need More Help

In the first instance please contact the dCS distributor for your country. Contact details may be found on the dCS web site - [www.dcsltd.co.uk](http://www.dcsltd.co.uk). Please provide the serial number of your unit, the software version currently installed and the version of software on the Update CD you are trying to install.