


dCS Remote Control

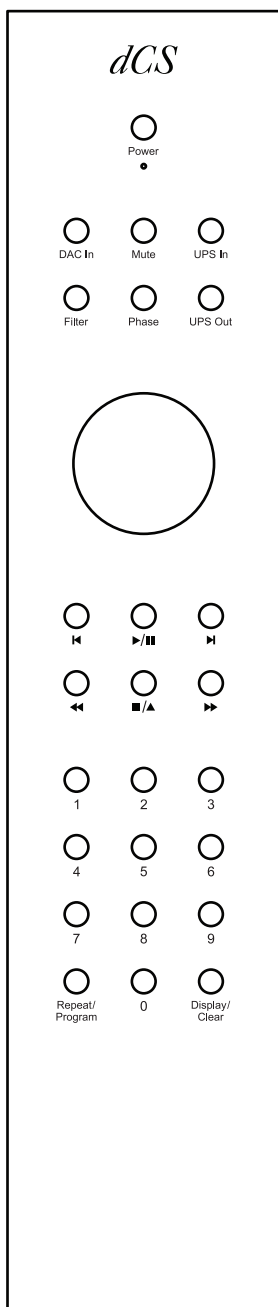

Fitting the batteries

1. Turn the remote over and slide the battery cover down off the back.
2. Fit 2 AAA (MN2400 Alkaline recommended) batteries by pressing the flat end (-) against the spring, then pressing the battery into the slot so that the + end makes contact with the stud.
3. Locate the battery cover on the back face and slide it upwards to close the remote.

User Guide

From **sleep** mode, press the **Power** button briefly to wake the system.

From normal mode, hold down the **Power** button for 2 seconds to put the system to **sleep**.

From normal mode, hold the **Power** button down for 4 seconds to switch the system off completely. The LED below the **Power** button flashes briefly when a command is sent.

DAC In selects the Player/DAC's active input.

Filter sets the Player/DAC's filter for the current sample rate.

Mute turns the Player/DAC's outputs off and on.

Phase reverses the absolute phase of the Player/DAC's analogue outputs.

UPS In selects the Upsampler's active input.

UPS Out sets the Upsampler's output sample rate.

The rotary control alters the Player/DAC's volume setting.

The **▶/||**, **■/▲**, **⏪**, **⏩**, **◀** and **▶▶** buttons operate in the same way as those on the Player/Transport front panel.

The **0 - 9** buttons select the current track.

Pressing **5** or **05** will select track 5.

Press the **Repeat/Program** button briefly to select track repeat or disc repeat mode.

With the disc stopped, hold down the **Repeat/Program** button for a few seconds to turn program mode on or off. Use the **0 - 9**

buttons to select a track sequence. Hold down the **Display/Clear** button for a few seconds to clear the last track from the sequence.

Press the **Display/Clear** button briefly to change the display mode. For the Rossini Player, this switches the display on or off. For other **dCS** Transports or Players, this feature changes the displayed time code.

Battery Precautions

The batteries must be inserted correctly by following the diagram next to the battery compartment. Failure to do so may result in a hazard and damage to the remote control not covered by the warranty.

Do not mix different types or brands of battery. Do not mix new and used batteries. Remove the batteries from the device before prolonged storage.

Do not short-circuit the batteries.

Do not put used batteries in a fire.

Keep batteries out of the reach of children.



Failure to fit the batteries correctly can damage your remote control. Such damage is not covered by the warranty.



Please dispose of used batteries properly at a waste disposal site, not in the household waste.

Note

The unit name-plate is located on the inside of the battery cover.